

## **Connection Functions**

At Terminal
D/U D
D/U E
PSU 12
PSU 0
PSU +
PSU -**Function** Speech from door Speech from door
Speech to door
12v AC for ringing & lock
12v AC for ringing & lock
12v DC for speech & lamps
12v DC for speech & lamps TEL A2
TEL A1
TEL L
TEL P Ringer Warble Ringer buzzer (if fitted) Speech from door Speech to door 1 B F TEL Common for ringers Common for speech TEL

Common for buttons

TEL G

Plan 1 Insert LINKS everywhere shown •• Ringer Warble volume, all phones have a spindle at the top left corner. Speech volume is adjustable on the back of the entrance panel. Speaker and Microphone have separate controls. Notes Entryphone Co. Ltd. 23 Granville Road, London, SW18 5SD U.K. T:020 8870 8635 www.entryphone.co.uk

Title: WDA\_1S\_3\_201 Date: August 2017 Drawn by:

Application:

Plan 1 – Single Button D/U